didsbury



AIRCRAFT APPLICATION SHEET 10/4180 HOIST KIT



AIRCRAFT APPLICATION SHEET 10/4180 HOIST KIT

Why is the Didsbury Multi-Purpose Hoist system different?

- Approved by Boeing for multiple applications in January 2023.
 (see applications matrix for Boeing fleet).
- Telescopic tube arrangement in place to enable adjustment to deliver all range of applications.
- Extended to 40ft cable whilst maintaining the existing Didsbury hoist benefits:
 - Single layer cable layering no birds nesting
 - Cable can be wound out without requiring tension to be maintained
 - Minimum of 4:1 Factor of Safety
 - 2-speed manual operation minimises operator effort and allows rapid wind in/wind out
 - Simple but effective dual braking system. The Didsbury hoist uses a governor shoe braking system for a Fast, accurate controlled descent with wind facility for final positioning.
 - Safety in operation is ensured by a 'dead mans' brake which is normally in the 'on' position. - Instantaneous fail safe, ensuring load never falls out of control.
 - Can be retrofitted to existing Didsbury Fishpole Hoists







AIRCRAFT APPLICATION SHEET 10/4180 HOIST KIT

MULTI-PURPOSE FISHPOLE HOIST KIT -TELESCOPIC EXTENSION TUBE

ITEM NO.	PART No.	DESCRIPTION	QTY
1	10/4069	SHACKLE ASSEMBLY	1
2	10/4174	FISHPOLE HOIST ASSEMBLY	1
3	46/1181	9" WINDING HANDLE	1
4	91/659	TOP SHEATH ASSY	1

2 OFF HOIST KIT ARE REQUIRED FOR THE FOLLOWING AIRCRAFT

- BOEING 737 CLASSIC, NG, MAX & BBB APU R/I BOEING 757 APU R/I

- BOEING 767 APU R/I BOEING 777 APU R/I BOEING 787 APU R/I
- BOMBARDIER C SERIES APU R/I
- AIRBUS A220 APU R/I


WEIGHT: 19kg

CABLE P/N IS 42/20T4 Ø 4mm X 40ft CABLE

Didsbury Engineering Co Ltd

Telephone: +44 (0)161 486 2200 Facsimile: +44 (0)161 486 2211 Email: sales@didsbury.com Web: www.didsbury.com

4

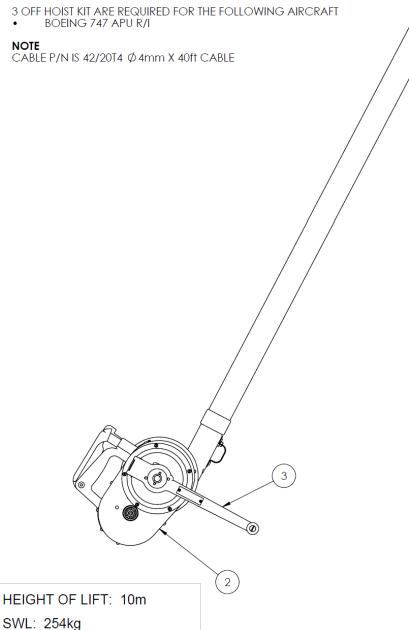

REVISION. 2

DATE: 07/03/2023



Application	737-345	737-678	737-MAX
APU Installation/removal	х	X	х
Fan Cowl Panel Installation / Removal (Sling Method)	х		
Inlet Cowl (Boom and "A" Frame) Installation / Removal	x		
Main Rudder Power Control Unit Installation		x	x
Starter-Generator Installation / Removal		x	x
Thrust Reverser Half Removal	х		

Application	747-400	747-8	757	767
Aft Mount Link Installation / Removal	х	Х		
Aft Shockmount Installation / Removal	х	х		х
Aft Supports and Aft Shockmounts Installation / Removal			X	
Allow Operation with APU-Driven Generator Removed		х		
APU Aft Mount Assembly Visual Inspection	х	х		
APU Aft Support and Shockmount Removal				х
APU Battery Installation/removal				х
APU Forward Support and Shockmount Removal				х
APU Generator Installation/removal	х	х		х
APU Installation/removal	х	х	х	х
Bulk Cargo Door - Activation / Deactivation		х		
Bulk Cargo Door - Installation / Removal	х	х		
Central Lateral Control Package (CLCP) Installation / Removal	х	Х		
Cone Bolt Support Block Installation / Removal	х	Х		
Cone Insulation Blanket Installation / Removal	X			
Engine Bleed Air Precooler Removal (Method 1)		х		
Fan Air Intake Duct Installation / Removal			х	
Forward support & Forward Shockmount Installation / Removal	Х	х	х	х
Inboard Elevator Power Control Package - Installation / Removal	х	х		
Main Battery - Installation / Removal				х
Main Landing Gear Installation				х
Main Landing Gear Door Installation / Removal				х
Main Landing Gear Retract Actuator - Installation / Removal				х
Main Landing Gear Shcok Strut Installation / Removal				х
MLG Overhead Mechanical Equipment Installation				х
No. 3 Cargo Door Installation/ Removal			х	
Nose Landing Gear Retract Actuator - Installation / Removal			Х	х
Stabilizer Trim Ballscrew Actuator Installation				х
TE Flap Power Drive Unit (PDU) Installation/ Removal			Х	Х
Thrust Reverser Installation/Removal			Х	
Trailing Edge Flap Power Drive Unit (PDU) Components Removal				х
Transmission - Installation / Removal		Х		
Vertical Aft Strut Mount - Installation / Removal		Х		
Vertical Support Tube Installation	х	х		



Application		777-89X	787
Aileron Power Control Unit - Installation / Removal			х
APU Battery Installation/removal		х	
APU Generator Installation/removal	х	х	
APU Installation/removal	х	х	х
Bulk Cargo Door - Installation / Removal	х	х	х
CPMU Memory Expansion Unit (CMEU) Installation / Removal	х		
Disk Array Installation / Removal	х		
Electro-Mechanical Actuator - Installation / Removal		х	х
Elevator Power Control Units (PCU) - Installation / Removal	х	х	х
Flap and Slat Hydraulic Control Module - Installation / Removal			х
Flap Power Drive Unit - Removal			х
Forward Cargo Air Conditioning Cargo Refrigeration Unit - I/R			х
Forward Strut Mount - Installation / Removal			х
Hard Disk Drive Array (HDDA) Installation / Removal	Х		
Horizontal Stabilizer Trim Actuator - Installation / Removal			Х
Horizontal Stabilizer Trim Actuator Electric Motor Control Unit - I/R			х
Integrated Cooling System Liquid Cooling Pump Package - I/R			х
Leading Edge Slat Power Drive Unit - Installation / Removal		х	х
Main Battery - Installation / Removal	х		
Main Landing Gear Drag Brace Lock Spring Installation	х		
Main Landing Gear Retract Actuator - Installation / Removal		х	Х
Main Landing Gear Side Brace Lock Spring Installation / Removal			
Nose Landing Gear Lock Spring Installation / Removal	х		
Nose Landing Gear Retract Actuator - Installation / Removal	х	х	Х
Nose Wheel Steering Valve Module Removal			х
Power Electronics Cooling System Liquid Cooling Pump Package - I/R			х
Precooler Installation / Removal with the Engine Installed	х	х	
QAM Modulator Unit (QMU) Installation / Removal			
Ram Air Turbine (RAT) - Installation / Removal		х	
Rudder Power Control Unit (PCU) - Installation / Removal		х	х
Stabilizer Trim Actuator - Installation / Removal			
Stabilizer Trim Actuator I/R after Jackscrew Fitting Inspection	х		
Vertical Aft Strut Mount - Installation / Removal			х